



Operation, Trouble shooting

TORPEDO G1275 Submersible Pump

Manual No **95354**

ΕN

Not approved for use in European explosive atmosphere locations.



Important Safety Instructions Read all warnings and instructions in this manual before using the equipment. Save these instructions.

Torpedo G1275 Submersible Pump

This pump is intended to be used in leachate side slop risers or landfill sumps with high solids content.



See page <u>2</u> for model information, including maximum working pressure and approvals.



Contents

1	Models
2	Dangers and Warnings
3	Installation
4	Operation
5	Performance charts
6	Drawings
7	Kits, Accessories & Troubleshooting
8	Notes
9	Technical Specifications
10	Warranty

Models

Part No.	Maximum TDH	Description
G1275-2P50	90	5HP 230V 3PH PUMP 50 FT CABLE
G1275-2P100	90	5HP 230V 3PH PUMP 100FT CABLE
G1275-2P150	90	5HP 230V 3PH PUMP 150FT CABLE
G1275-3P50	90	5HP 460V 3PH PUMP 50FT CABLE
G1275-3P100	90	5HP 460V 3PH PUMP 100FT CABLE
G1275-3P150	90	5HP 460V 3PH PUMP 150FT CABLE

Pump power requirements

НР	VOLTS	PAHSE	FLA
5	230	3	13.8
5	460	3	6.6



DANGER[¤]



3

DANGER SEVERE ELECTRIC SHOCK HAZARD

This equipment is powered by more than 240V. Contact with this voltage will cause death or serious injury.

This equipment can be powered by more than 240V. Contact with this voltage will cause death or serious injury.







DANGER SEVERE ELECTRIC SHOCK HAZARD

This equipment can be powered by more than 240V. Contact with this voltage will cause death or serious

When accessing the electrical enclosure while power is present:

- Do not make contact with components or wires unless instructed to do so.
- Wear appropriate personal protective equipment.







All electrical wiring must be done by a qualified electrician and comply with all local codes and regulations.

Grounding









The inequipment must be grounded to reduce the risk of static sparkg. Static sparking can cause fumes to ignite or explode. Grounding provides an escape wire for the electric current.



Installation

- 1. Connect discharge tube cam lock to pump cam lock.
- 2. Feed the discharge tube thru the well head.
- 3. Feed the power cord thru well cap.
- 4. Connect support cable and rout thru well cap.
- 5. Install level transducer for pump operation and rout thru the well cap.
- 6. Connect pump power cable to control panel.
- 7. Connect level transducer cable in the control panel
- 8. Check the pump rotation.
- 9. Lower pump into the well to desired depth.
- Configure control panel for pump operation.
- 11. Turn the pump selector switch to Hand. Verify that fluid is flowing.
- 12. Turn the pump selector switch to Auto.
- 13. Verify the pump runs in Auto.

Control Panel Operation


When the pump is installed and connected to a QED control panel, the pump will run until the level in the well drops below the off set point in the controller. Then when the level rises to the start set point the pump will turn on and start pumping, as long as there are no other alarms.



5

Performance Chart Example

PUMP PERFORMANCE CURVES													
MODEL									VER. NO.				
MODEL	STANDARD SPECIFICATION								REFERENCE SPECIFICATION				
FREQUENCY				7	6	0					Ηz		
DISCHARGE		3		incl	n	/		80		m	ım		
OUTPUT		5		HP)	/		3.7		k	W	HP	kW
HEAD					6	9					ft		
CAPACITY	132 GPM												
PHASE/VOLTAGE	3 Ø	220	٧	230	٧	440	٧	460	٧	575	٧	Ø	V
RATED CURRENT		14.0	Α	13.8	Α	6.9	Α	6.6	Α	5.5	Α		Α
POLE / rpm	2 P / 3420 rpm												
START METHOD	DIRECT												
INSULATION CLASS	F												
REMARK													

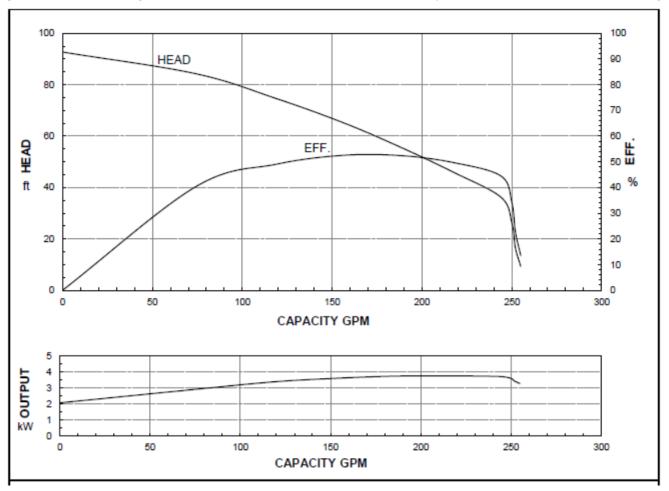



Motor Specifications

Motor design Air-filled

Applications Dewatering

Insulation Class F

Max Liquid Temp 0-40° C (32-104° F)

Frequency 60 Hz RPM 3600

Pump & Motor Data

Impeller Enclosed-channel

Solid 0.5"

Discharge 3"

Motor 2 Pole

kW • Hp 3.7 kW • 5 Hp

Phase 3

Cable VCT or SJOW/SOW • 26 ft

Protection Auto-cut

Materials of Construction

Motor Housing FC-200

Impeller HiCR

Wear Ring HiCR

Rotor SUS 403

Casing SUS 304

O-Rings BUNA "N"

Bearings Roller bearings

Agitator FCD-700

Mechanical Seal Silicon/Silicon (Lower)

Carbon/Ceramic (Upper)

Dimensions & Weight

6

Pump Weight 115 lbs

Max Submergence 100 ft


Optional —

1Ø AMP 115V - 3Ø 230V 13.8 A

208V — 460V 6.6 A

230V - 575V 5.5 A



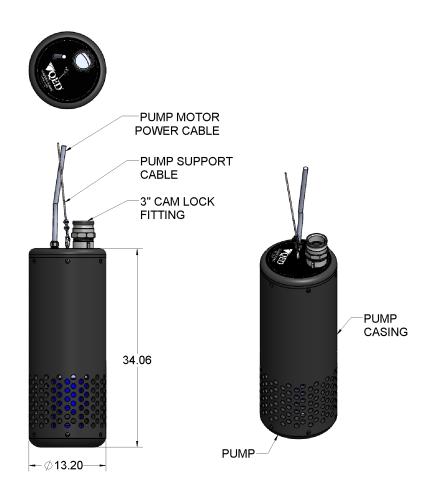

Kits and Accessories (optional)

UL508A and UL698 Control panels

Level transducer

Support cable / rope

Well caps and flanges



Troubleshooting



Problem	Cause	Solution
Fluid slows or stops flowing	Plugged inlet	Clean screen
Fluid slows or stops flowing	Plugged discharge tube	Clear discharge tube
	Excessive head pressure	Relive the back pressure on the system.
Pump stops running	No power to pump	See control panel fuses, motor overload
	Pump is clogged	Pull pump and clean

▼QED			



10

Technical Specifications

G1275 Electric Agitator Pump					
	US	Metric			
Maximum fluid working flow	250 gpm @ 20 tdh	946 l/min			
Maximum Total Dynamic Head	90 ft	27.5 m			
Maximum free-flow delivery	255 gpm @ 5 tdh	965 l/min			
Pump dry weight	135 lbs not including the	135 lbs not including the wire			
Maximum size pumpable solids	3/8 in.	9.5 mm			
Maximum viscosity	10,000 cps				
Environmental temperature range	40°-120°F	4°–49°C			
Minimum fluid temperature	40°F	4°C			
Maximum fluid operating temperature					
Stainless steel	250°F	121.1°C			
Inlet/Outlet Sizes					
Fluid inlet size	Scre	Screen			
Fluid outlet size	3 in	3 in NPT			

Graco Standard Warranty

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

FOR GRACO CANADA CUSTOMERS

The Parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés, à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

11 95354 REV 1 9-18-20 11

QED Environmental Systems, Inc.

CUSTOMER SERVICE

Email: info@qedenv.com

Monday–Friday

7:30 a.m.-5 p.m. Eastern Time

+1 (800) 624-2026 +1 (734) 995-2547

SALES & SERVICE

Email: info@qedenv.com

Monday–Friday

7:30 a.m.-5 p.m. Eastern Time

+1 (800) 624-2026 +1 (734) 995-2547

TECHNICAL SUPPORT

Email: info@qedenv.com

Monday-Friday

7:30 a.m.-5 p.m. Eastern Time

+1 (800) 624-2026 +1 (734) 995-2547

GLOBAL HEADQUARTERS 2355 Bishop Circle West Dexter, MI. 48130 +1 (800) 624-2026

EN NOVATIVE TECHNOLOGIES SUPPORT

+1 (888) 411-0757 +1 (920) 465-3960

Email: info@ennovativetech.com

All written and visual data contained in this document reflects the latest product information available at the time of publication.

Graco reserves the right to make changes at any time without notice.

Original instructions. This manual contains English. MM

Graco Headquarters: Minneapolis

International Offices: Belgium, China, Japan, Korea

GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS MN 55440-1441 • USA Copyright 2018, Graco Inc. All Graco manufacturing locations are registered to ISO 9001.